


Lashing Rings Fitting Instructions


Thank you for purchasing a quality Utemaster™ product, our aim is provide you with as much assistance as possible throughout the fitting process. Please call 0800 683 352 or email sales@utemaster.co.nz if assistance is needed. We recommend you read these instructions through before attempting to install.

Lashing Ring Fitting:

Step 1) Mark on the underside of the Load-Lid where the holes for the lashing ring bolts need to be – normally six bolt holes, three down each side. See the diagrams below and select the appropriate dimensions for your Load-Lid:

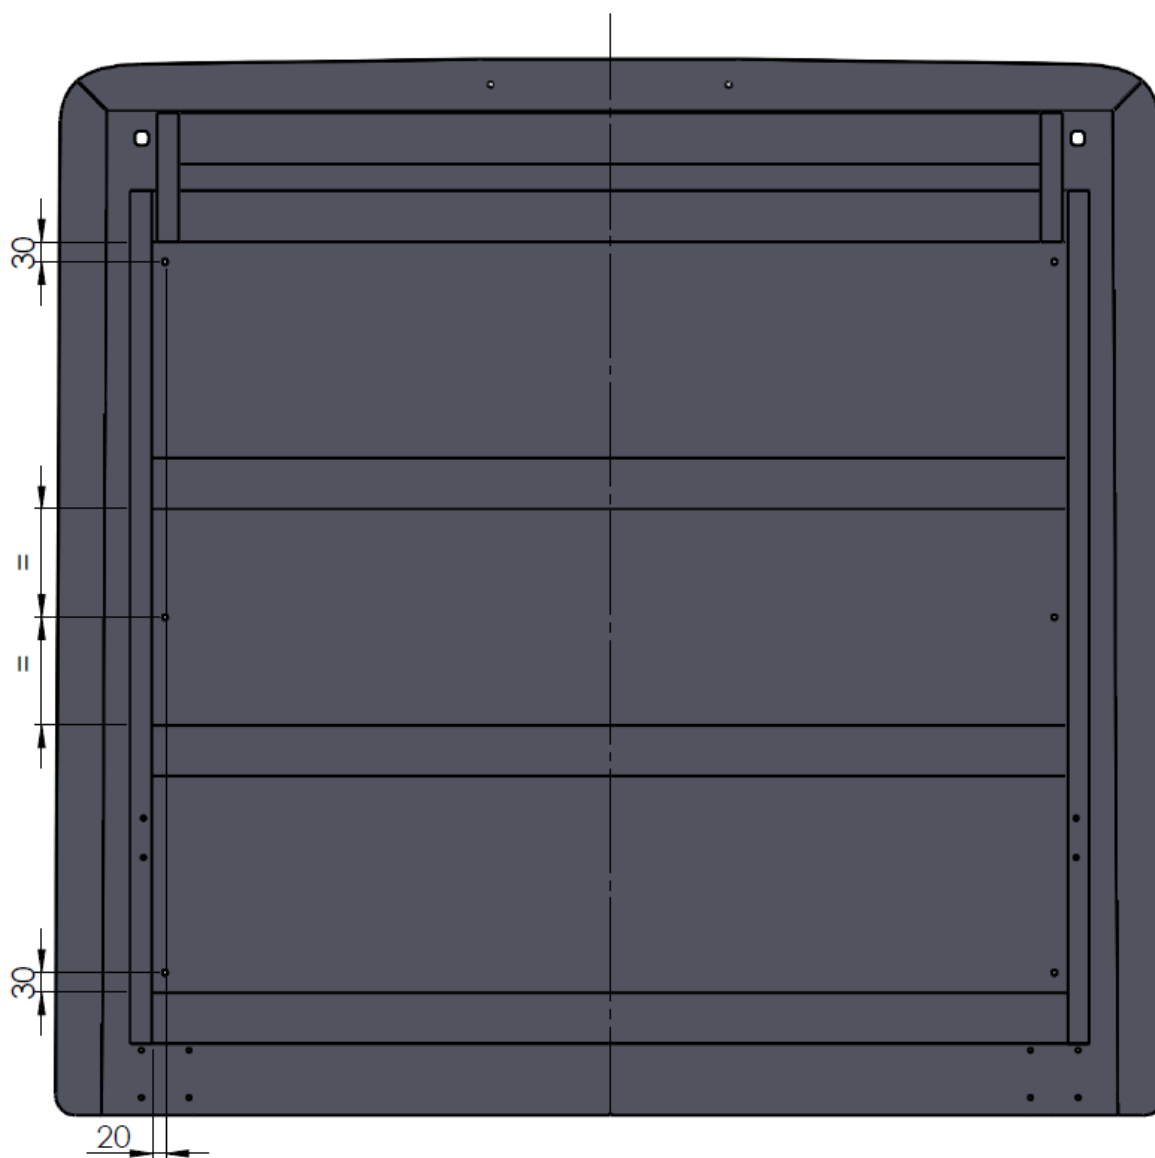

1: Standard or Cab Guard Load-Lid

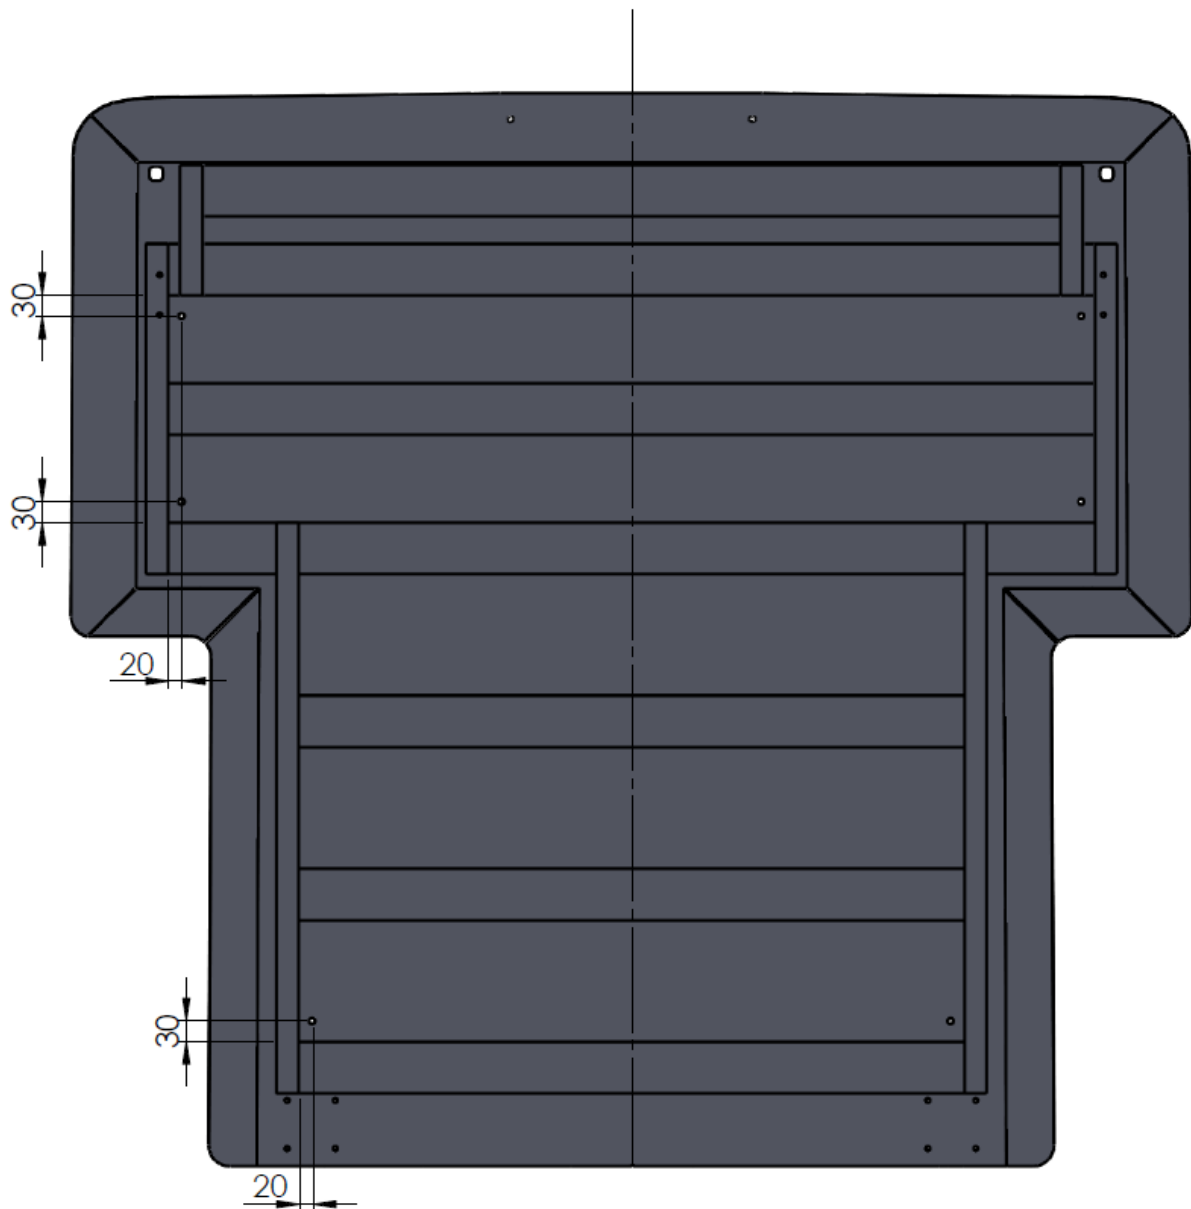

2: Sports Bar Load-Lid

Step 2) Drill right through each mark with an 8.5mm drill bit.



Step 3) Using a caulking gun, put a small bead of black sealer around the edge of the six holes on the top the Load-Lid. Be careful not to spread too far from the hole.



Step 4) The lashing rings will be assembled with the appropriate fasteners. Separate the lashing ring from the fasteners and place on top of the bolt hole with the ring pointing into the centre of the Load-Lid. Line the hole in the lashing ring up with the bolt hole and ensure not to smear the sealer.



Step 5) Place the small washer on the bolt and insert into the top of the lashing ring.



Step 6) Place the large washer and nut onto the bolt underneath the Load-Lid. Ensure the ring on top of the Load-Lid is straight, then tighten using an impact drive or something similar.



Step 7) Repeat steps 4-6 for the remaining five lashing rings.

Your lashing rings are now fully fitted and ready to use. Lashing rings are rated to support loads of up to 150kg while travelling.

Thank you again for using Utemaster™ and don't forget to keep checking www.utemaster.co.nz for our latest innovations!