

Crossbar Install - Load Lid

You will need

- Scissors

- Measuring Tape

Rubber Infill

- 1.) Remove the bars from the box/packaging
- 2.) Take the end caps off the bars
- 3.) Hold the bar at a vertical angle and shake so that the rubber infills come out




Push the rubber infill into the channel on top of the bar

Note; the bar will contain 3 pieces of infill, when you get to the third piece cut it flush with the end of the bar as shown so that the whole channel is filled



Attaching the foot-pack to the bar

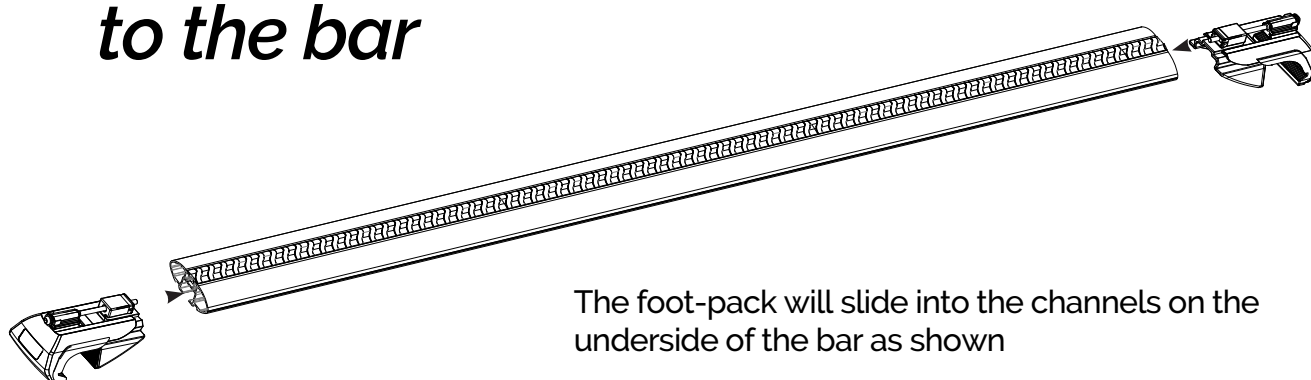

The foot-pack will slide into the channels on the underside of the bar as shown

Mounting the bars to the Load-Lid side rails



Apply downward force to the Cross Bars and **push it down** onto the side rails

You may need to loosen the footpack using the supplied tool so you can make the space between the feet wider


Measure the bars

Use a measuring tape to measure the length shown, this should be even on both sides of the bar - if it is not you will need to adjust it until it is.



Tighten

You can now tighten the foot-pack using the supplied tool, make sure to tighten evenly on both sides of the bar.

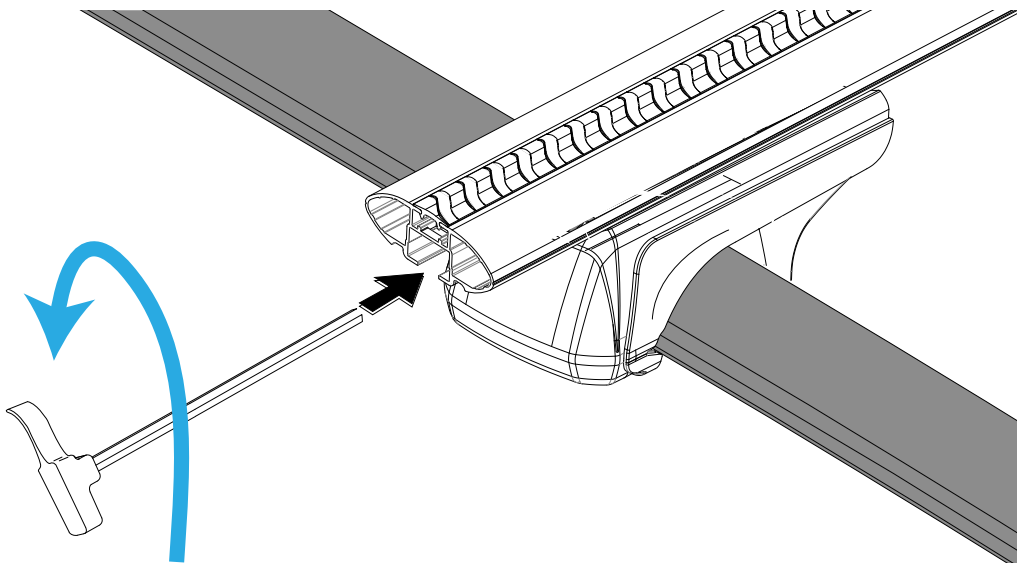

Apply plastic infills

There are two empty channels on the underside of your bar, these will be either side of your foot-pack. Cut these to fill as shown:

